

EXPANSION OF HOT WATER BACK TO THE DRIVE CAN CAUSE OVER PRESSURE OF THE SYSTEM IN ADDITION TO P.R.V (PRESSURE RELEASE VALVES) TRIPPING. HOT WATER EXPANDS AT 3% BASED ON THE VOLUME OF THE HOT WATER TANK, AN ADDITIONAL EXPANSIONS TANK MAY HAVE TO BE INSTALLED SO THAT THIS DOES NOT OCCUR.(PROCEDURE BELOW TO CORRECT THIS PROBLEM)

